



## The Woodsmiths Pradera Solid Wood Vanity

We recommend that a qualified tradesperson installs your unit. Prior to installation check that no damage has occurred during transit as our warranty does not cover the cost of removal once installed. The warranty will be null and void if damage occurs during or after installation.

1. Before installing ensure there is sufficient timber support to fasten the vanity. We recommend fixing these brackets **prior to wall lining**. Recommended timber support is double 45x90 framing for each wall bracket as shown below.
2. Using the screws supplied, attach the brackets to the wall studs at the height required minus the 30mm of the benchtop thickness.

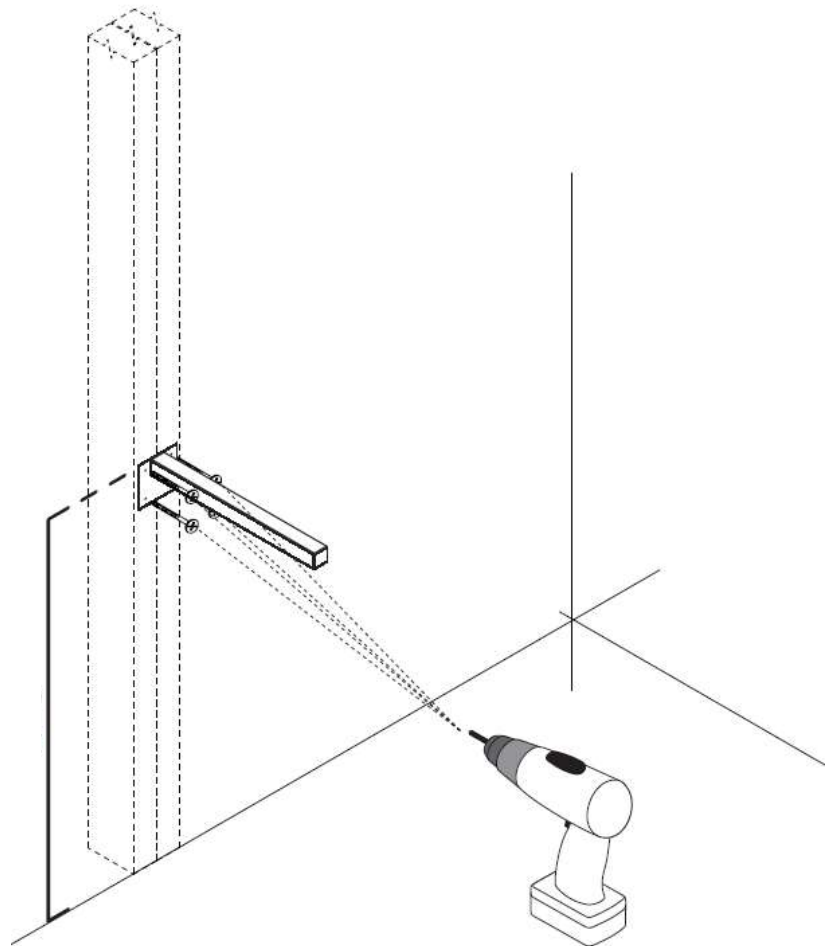

3. After all brackets have been installed place the top onto the brackets and check if level. Adjustments can be made by the grub screw in the wall bracket or packers if needed.
4. Once satisfied with the position of the vanity fix in place by the screw holes in the brackets. Pre-drill these holes before attaching using the screws and washers supplied.
5. A bead of sealant must be applied to all edges where water penetration may occur. Between vanity and wall and where the sink is. If any cut-outs have been made on-site, the raw timber must be resealed with at least 2 coats of suitable polyurethane sealer. This product can be purchased on The Woodsmiths website.

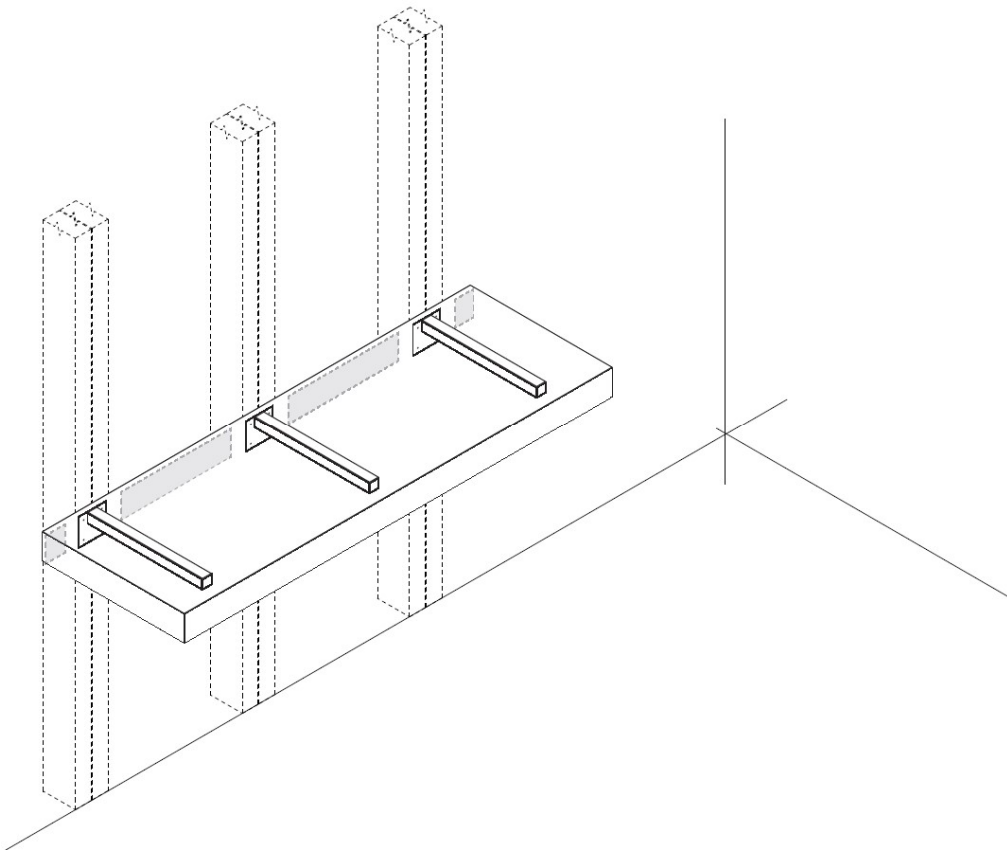

Enjoy your new solid wood vanity and we would greatly value any feedback and photos! Send to [sales@woodsmiths.co.nz](mailto:sales@woodsmiths.co.nz)

